


Sentinel Barstool

Sentinel

ASSEMBLY INSTRUCTIONS

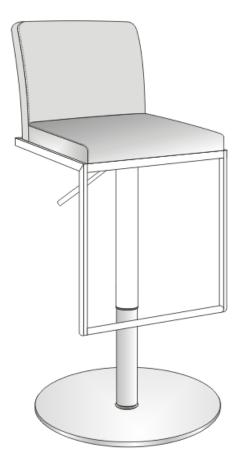

Parts List

| Label | Picture | Description | QTY |
|-----------------|---------|---------------|-----|
| A | | Seat | 1 |
| В | | Footrest | 1 |
| С | | Metal Base | 1 |
| D | | Handle | 1 |
| <u>Hardware</u> | | | |
| Label | Picture | Description | QTY |
| E | (Jimmin | Screw 6x30 MM | 4 |
| F | | Spanner (M5) | 1 |

BEFORE BEGINNING ASSEMBLY:



Read instructions cover to cover



Have two adults on hand for assembly



Do NOT assemble on flooring or carpet. Assemble on a clean nonmarring surface (ex: packing foam)



Save all packaging until assembly is completed

Assembly Steps

Step 1

In order to activate the gas hydraulic, it is important that once you have assembled the stool that you raise the lever and bounce your weight up and down on the stool and then lift your weight off with the lever still raised and the stool should begin to rise.

[&]quot;Need a part?Call TOV at 516-888-3355 or email service@tovfurniture.com"