
Sierra Media Console

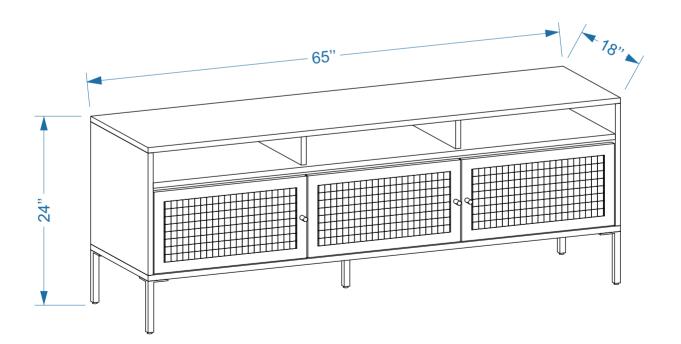

SIERRA ASSEMBLY INSTRUCTIONS



PARTS LIST -

LABEL	PICTURE	DESCRIPTION	QTY
A		CHEST	1
В		LEGS	4
С	T	MIDDLE LEG	1


- HARDWARE

LABEL	PICTURE	DESCRIPTION	QTY
D		SCREW M6x20	14
E	\bigcirc	WASHER Ø16xØ6x1mm	14
F		WRENCH M4x60	1
G	\bigcirc	HANDLES	3
н		SCREW M4x30	3

BEFORE BEGINNING ASSEMBLY:



 
Read instructions cover to cover




- Do NOT assemble on flooring or carpet. Assemble on a clean nonmarring surface (ex: packing foam)
- Save all packaging until assembly is completed

- ASSEMBLY STEPS

STEP 1

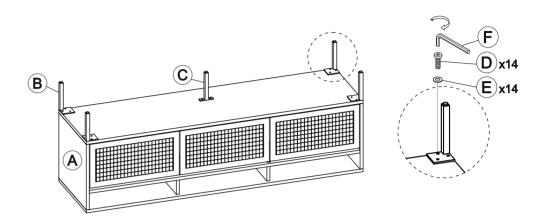



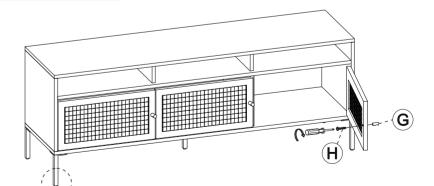

Adjust leveler as needed



CARE & MAINTENANCE



Do not put hot items directly on furniture surface.



Do not clean furniture with harsh cleansers or polish



Dust and wipe up spills using a clean, non-colored, lint-free cloth.



Stains may be removed with a mild soap solution and a damp cloth.



Do not place furniture under direct sunlight.



Do not place furniture near heating or cooling vents.



Do not write on furniture without a padded barrier to protect the surface.



Do not place furniture outside, for indoor use only.

"Need a part? Call TOV at 516-888-3355 or email <u>service@tovfurniture.com</u>"