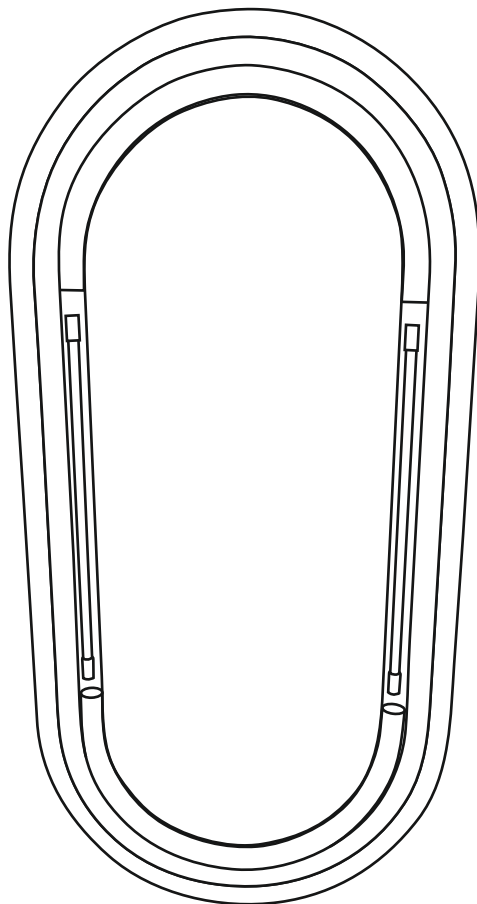


Neon Wall Mirror

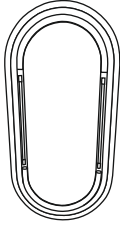



TOV

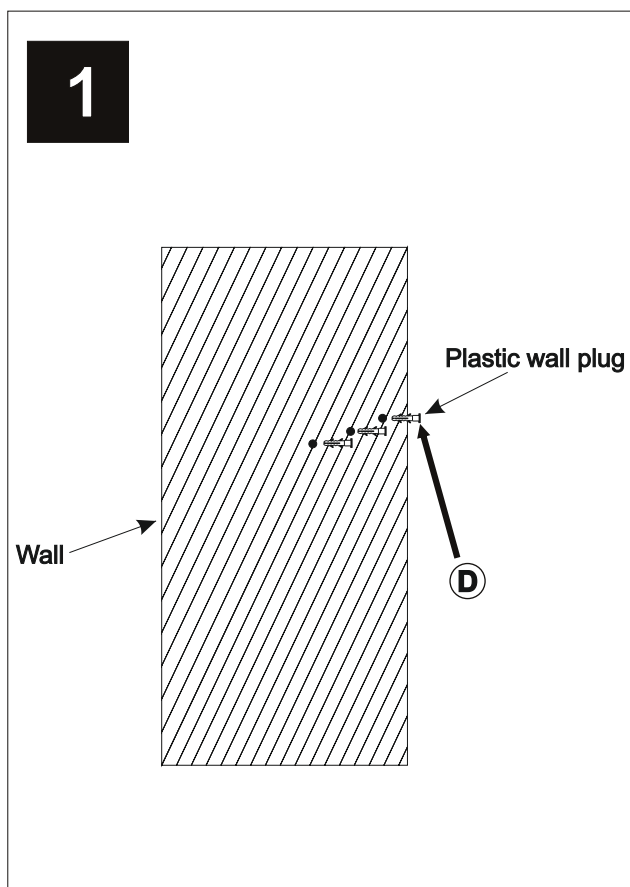
NEON WALL MIRROR

ASSEMBLY INSTRUCTION

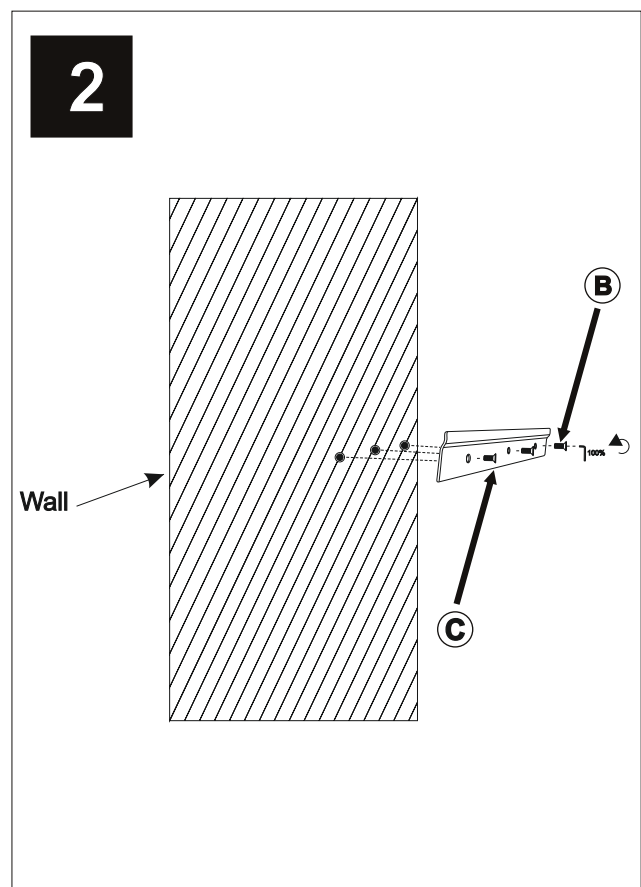


Part List and Hardware List

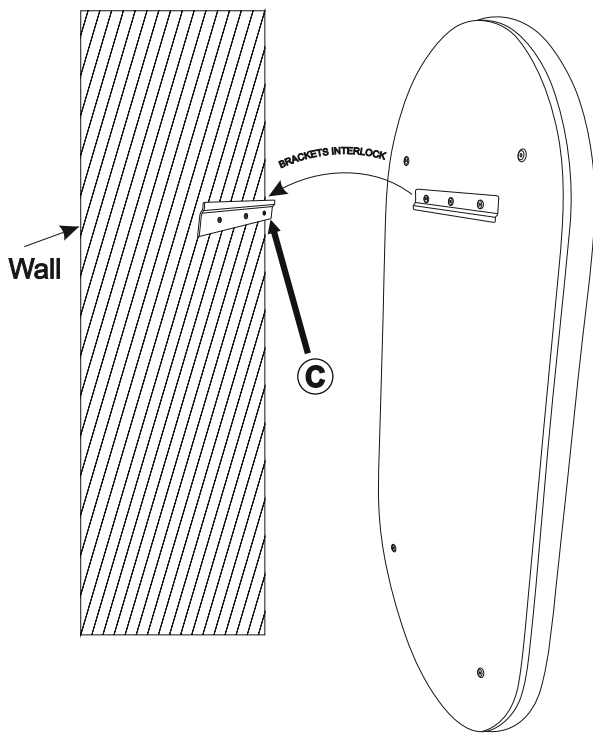
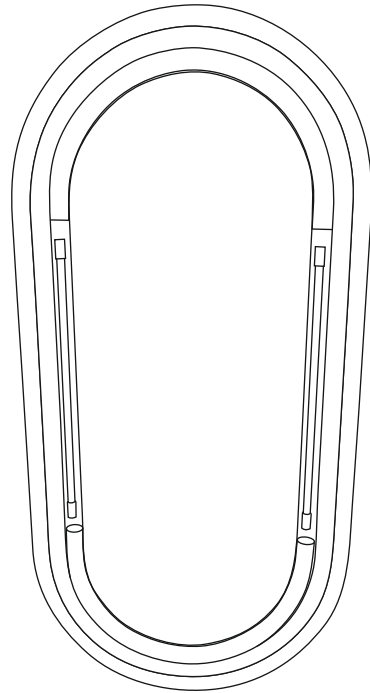
	DESCRIPTION	PICTURE	QUANTITY
A	MIRROR		1
B	SCREW		3
C	HANGMAN METAL STRIP		1
D	PLASTIC WALL PLUG		3



Determine where you wish to hang the mirror and mark on the wall where the 3 plastic plugs (D) should be inserted horizontally oriented.



Insert screw (B) through three holes in hangman metal strip (C) and tighten screw (B) with a screw driver.

3**4**

Install the assembled mirror by hooking onto the installed mounting hangman metal strip (C).

CARE & MAINTENANCE

1. NOTE: Under no circumstances should an ammonia-based cleaner be used on mirrors.

2. When cleaning the mirror surface use only a lint-free polishing cloth for cleaning.

To remove stubborn stains slightly dampen the cloth with water or rubbing alcohol.

3. When cleaning the metal frame use only a damp cloth.

4. NOTE: Do not use abrasive cleansers on any part of the mirror.



Save all packaging until assembly is completed

Need a part? Call TOV at 516-888-3355 or email service@tovfurniture.com