

Harley

ASSEMBLY INSTRUCTIONS



-PARTS LIST-----

LABEL	PICTURE	DESCRIPTION	QTY
А		Seat	1
В		Cross rail	1
С		Cross rail	1
D		Leg	4
E		Base support	1

----HARDWARE LIST-----

LABEL	PICTURE	DESCRIPTION	QTY
1)		Allen Key	1
2		Bolt(M6*35mm)	8
3		Bolt(M6*55mm)	4
4		Spring Washer	8
(5)	0	Washer	8

BEFORE BEGINNING ASSEMBLY:



Read instructions cover to cover



Mave two adults on hand for assembly


Do NOT assemble on flooring or carpet. Assemble on a clean non- marring surface (ex: packing foam)

Save all packaging until assembly is completed


Need a part?Call TOV at 516-888-3355 or email service@tovfurniture.com

-ASSEMBLY STEPS-


STEP 1

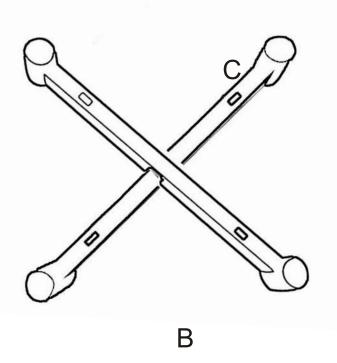


> Align and position the cross rails as illustrated.

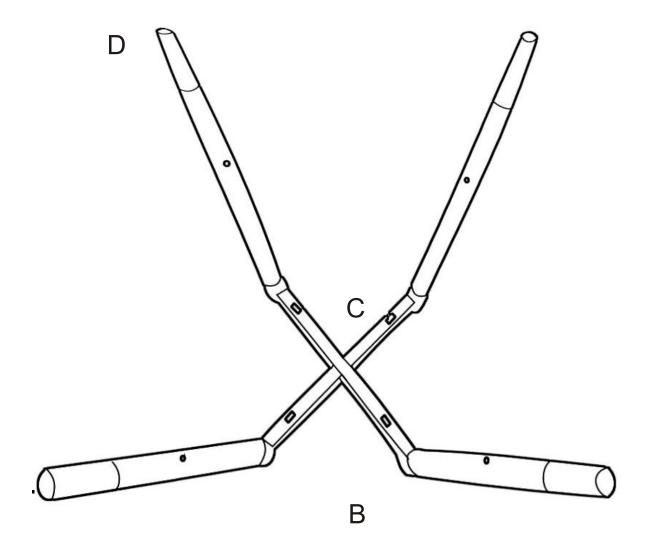

> Insert the Legs(D) into the Cross rails as shown above.

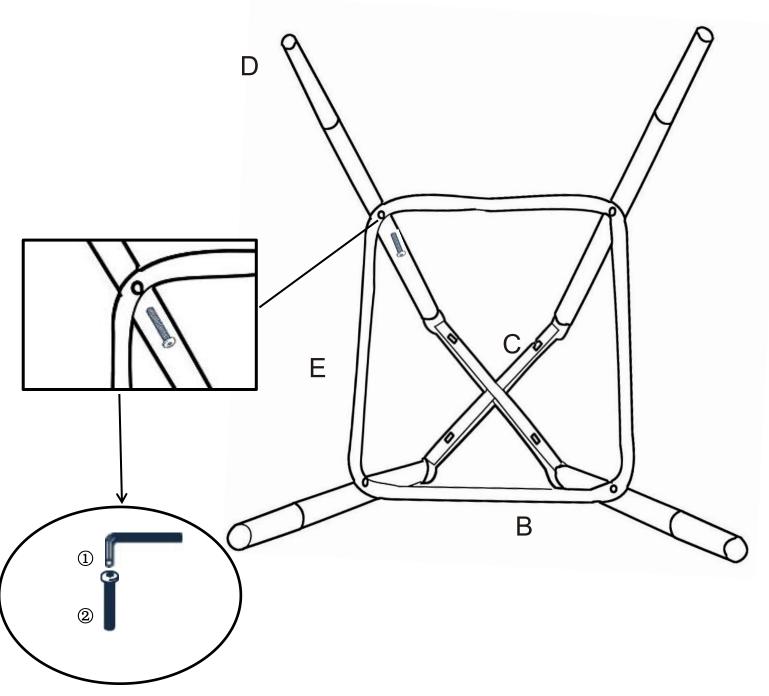


>Attach the Base Support(E) to the Legs with the included hardware. Simply screw the bolts into the corresponding pre-drilled holes as illustrated above.

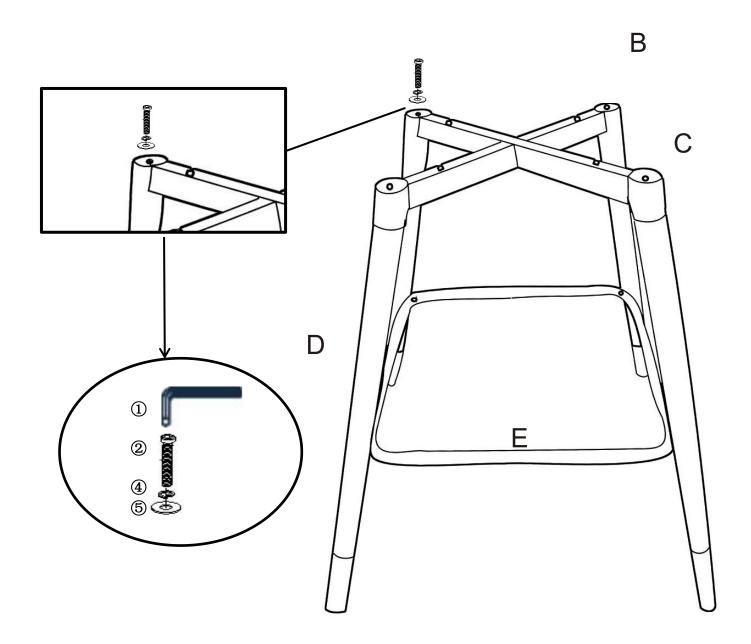

>Turn the assembled metal frame base rightside up.

>Screw Bolt(2) ,Spring Washers(4) and Washers(5) into mounting position on the Cross rail(B &C) using Allen Key(1).

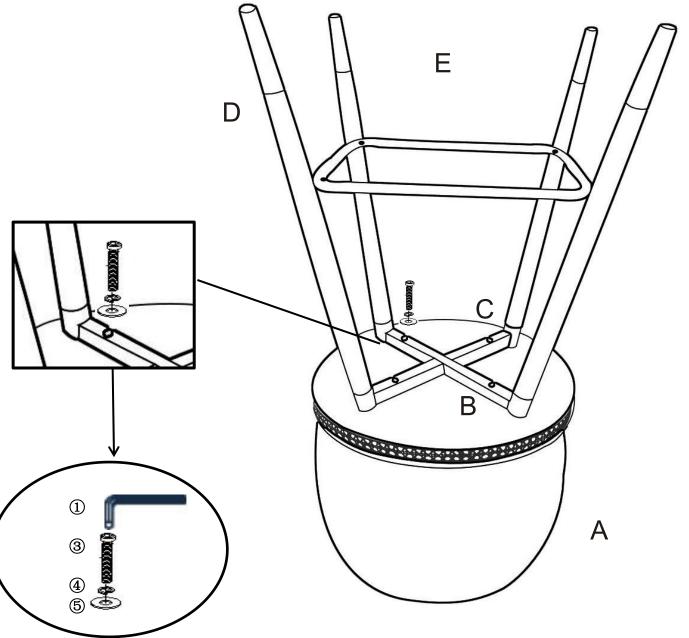

>Place the assembled metal frame base on the Seat(A),as shown in the picture. Align and fasten Seat(A) to the assembled metal frame base using Bolt (3), Spring Washers(4) and Washers(5) with Allen key(1).

>Repeat the same step to install the remaining three Legs(D).



>Turn the chair right way up, it is now ready for use.

CARE & MAINTENANCE ———



Do not put hot items directly on furniture surface.



Do not clean furniture with harsh cleansers or polish.



Dust and wipe up spills using a clean, non-colored, lint-free cloth.



Stains may be removed with mild soap solution and a damp cloth.



Do not place furniture under direct sunlight.



Do not place furniture near heating or cooling vents.



Do not write on furniture without a padded barrier to protect the surface.



Do not place furniture outside, for indoor use only.