


Carolina **Bed**King/Queen Size

CAROLINA ASSEMBLY INSTRUCTIONS

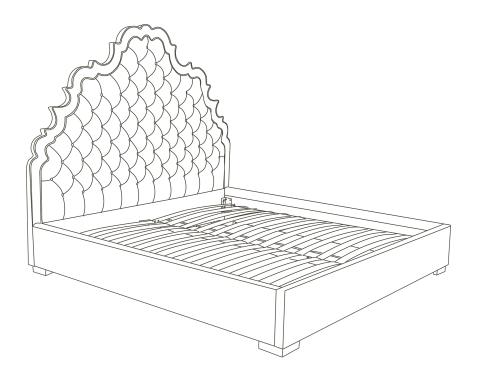

PARTS LIST ——

LABEL	PICTURE	DESCRIPTION	QTY
A		HEADBOARD	1
В	(RAIL	2
С	()	FOOTBOARD	1
D		SLAT	2
E		Support Bar	1
F		Slat Support Leg	3
G		BED LEG	4

_____ HARDWARE _____

LABEL	PICTURE	DESCRIPTION	QTY
Н	<u> </u>	Slat Bolt M8*25MM	12
I	0	Spring Washer	12
J	0	Metal Gasket	12
К	0	Slat Support Leg Bolt M8*45MM	3
L	©	Bed Leg Bolt	8
М		Wrench	1
N		Wrench	1

BEFORE BEGINNING ASSEMBLY:



Read instructions cover to cover



Have two adults on hand for assembly



Do NOT assemble on flooring or carpet. Assemble on a clean nonmarring surface (ex: packing foam)




Save all packaging until assembly is completed

Need a part? Call TOV at 516-888-3355 or email service @tovfurniture.com


ASSEMBLY STEPS

STEP 1 Attach the side rails to the headboard and footboard using the pre attached hardware. Once the bed is assembled tighten all bolts securely.

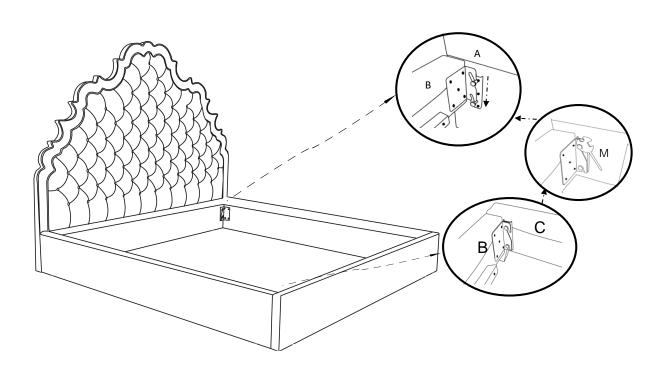

ASSEMBLY STEPS


STEP 2 Carefully turn over the bed by two adults, Attach the bed legs(G) and ensure all legs are securely attached

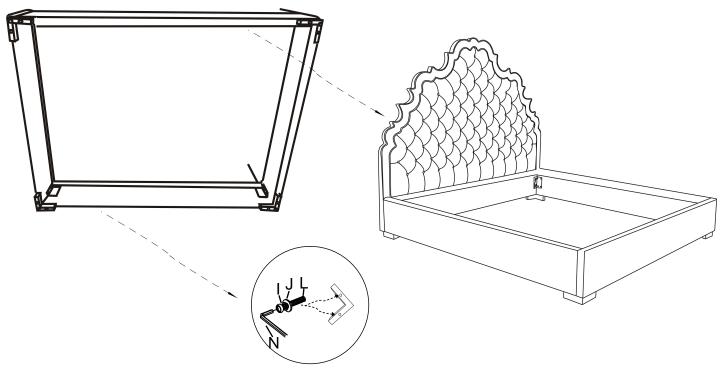


STEP 3 Attach the 3 support legs to the support bar and ensure all legs are securely attached.

Connect the support bar to the HB and FB, secure them using the Cross Slat Bolt.

Position the slat frames inside the bed and secure them using the plastic bolts. Use the included wrench to tighten them.

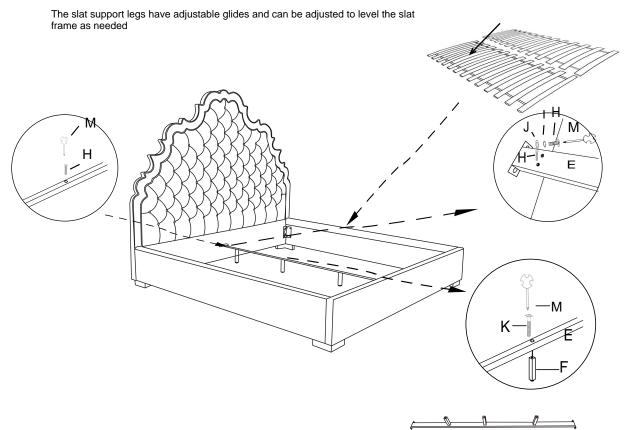

Assembly is complete.

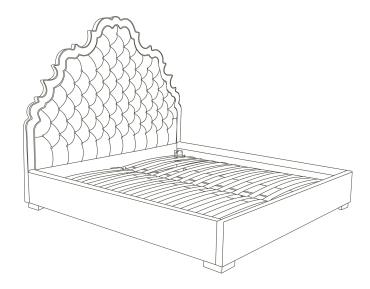

CARE & MAINTENANCE —



Do not put hot items directly on furniture surface.



Do not clean furniture with harsh cleansers or polish.



Dust and pick up spills using a clean, non-colored, lint-free cloth.



Stains may be removed with a mild soap solution and a damp cloth.



Do not place furniture under direct sunlight.



Do not place furniture near heating or cooling vents.



Do not write on furniture without a padded barrier to protect the surface.



Do not place furniture outside, for indoor use only.