




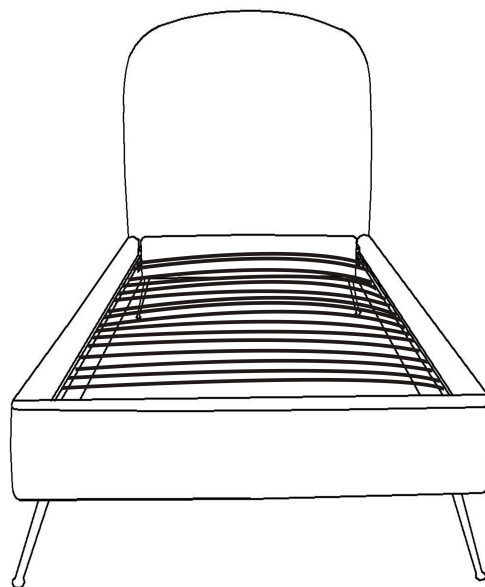




Vivi Bed
Twin Size

Vivi

ASSEMBLY INSTRUCTIONS



PARTS LIST

LABEL	PICTURE	DESCRIPTION	QTY
A		HEADBOARD	1
B		RAIL	2
C		FOOTBOARD	1
D		SLAT	1
E		BED LEG	4

HARDWARE

LABEL	PICTURE	DESCRIPTION	QTY
F		Spring Washer M8	24
G		Metal Gasket M8	24
H		Slat Bolt M8*30MM	4
I		Bed Leg Bolt M8*30MM	24
J		Bed Leg Screw	6
K		Connection	2
L		Leg Fixed Part	2
M		Wrench	1
N		Wrench	1

BEFORE BEGINNING ASSEMBLY:



Read instructions cover to cover



Have two adults on hand for assembly



Do NOT assemble on flooring or carpet. Assemble on a clean non-marring surface (ex: packing foam)




Save all packaging until assembly is completed

Need a part? Call TOV at 516-888-3355 or email service@tovfurniture.com

ASSEMBLY STEPS


STEP 1

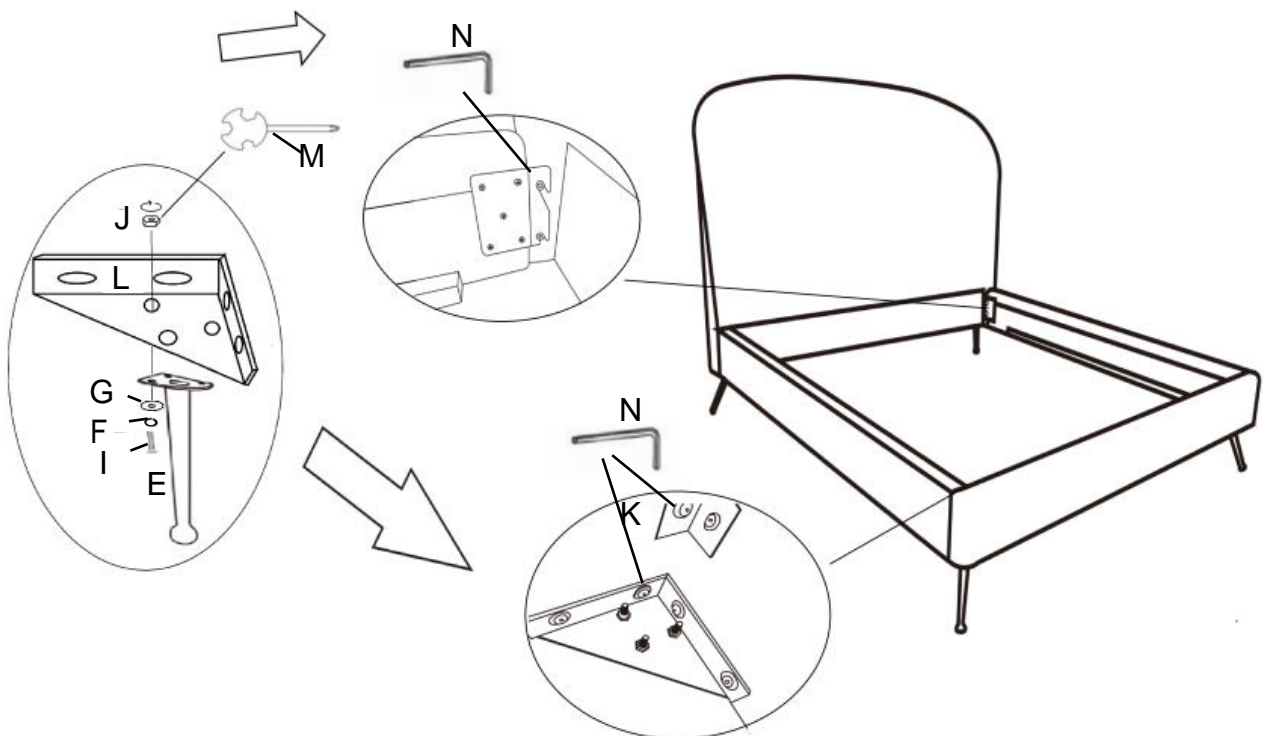

- 1, Attach the side rails to the headboard and footboard by using the pre attached hardware. Once the bed is assembled tighten all bolts securely.
 - 2, Attach the 2 bed legs to the fixed parts, then attach them to the footboard and tighten all bolts securely.
 - 3, Attach the 2 bed legs to the headboard and tighten all bolts securely.
 - 4, Attach the connections(K) to the footboard and side rails and tighten all bolts securely.
-


ASSEMBLY STEPS

STEP 2 Position the slat frames inside the bed and secure them using the slat bolts. Use the included wrench to tighten them.

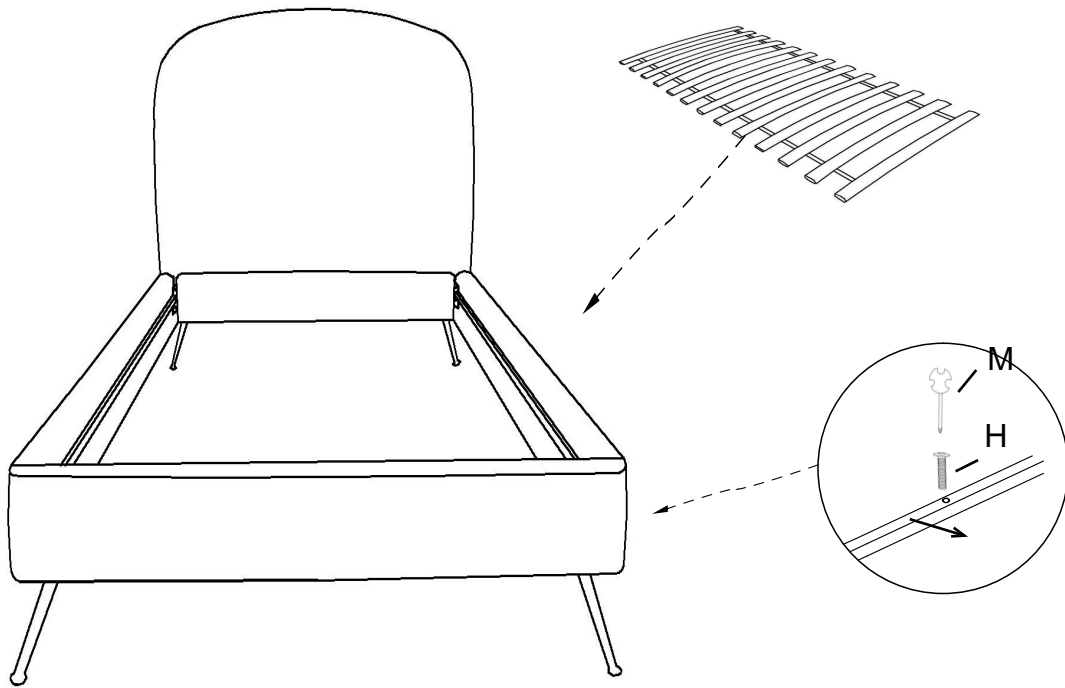

STEP 3

Assembly is complete.

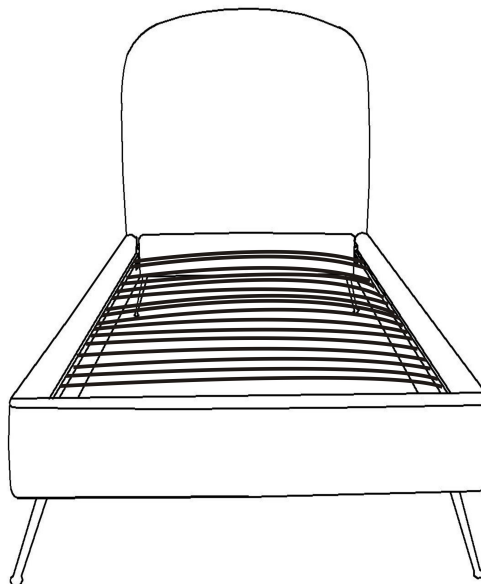

CARE & MAINTENANCE



Do not put hot items directly on furniture surface.



Do not clean furniture with harsh cleansers or polish.



Dust and pick up spills using a clean, non-colored, lint-free cloth.



Stains may be removed with a mild soap solution and a damp cloth.



Do not place furniture under direct sunlight.



Do not place furniture near heating or cooling vents.



Do not write on furniture without a padded barrier to protect the surface.



Do not place furniture outside, for indoor use only.