


**CHIC WALL SCONCE**  
TOV-G18158

T O V  
FURNITURE


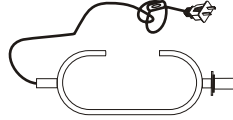



# CHIC

---

## ASSEMBLY INSTRUCTIONS

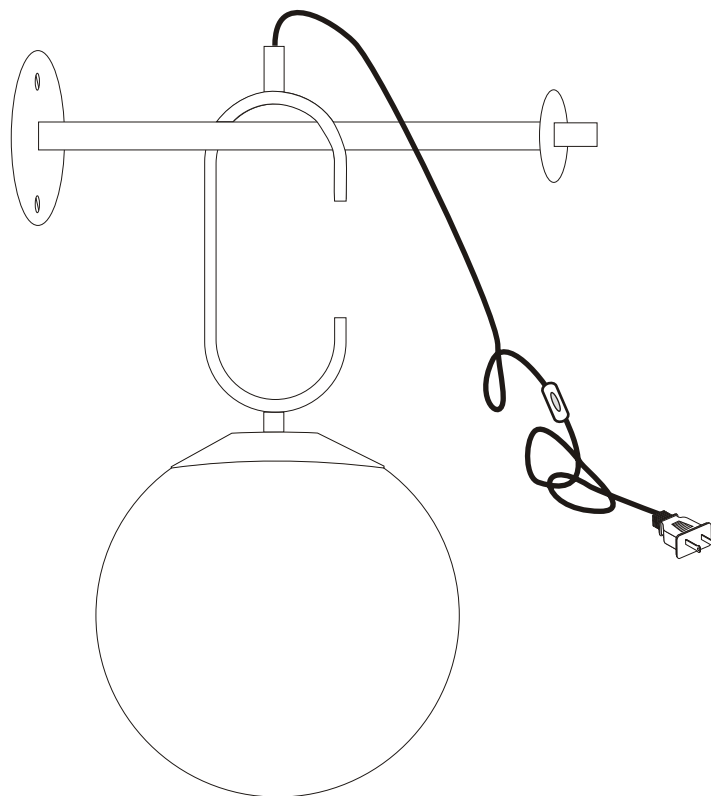


# PARTS LIST & HARDWARE LIST

LABEL	DESCRIPTIONS	PICTURE	QTY
A	WALL STICK		1X
B	SHADE HOLDER		1X
C	GLASS BALL		1X
D	PLASTIC CEILING MOUNTS		2X
E	SCREW		2X


## PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product. Estimated Assembly Time: 10 minutes.

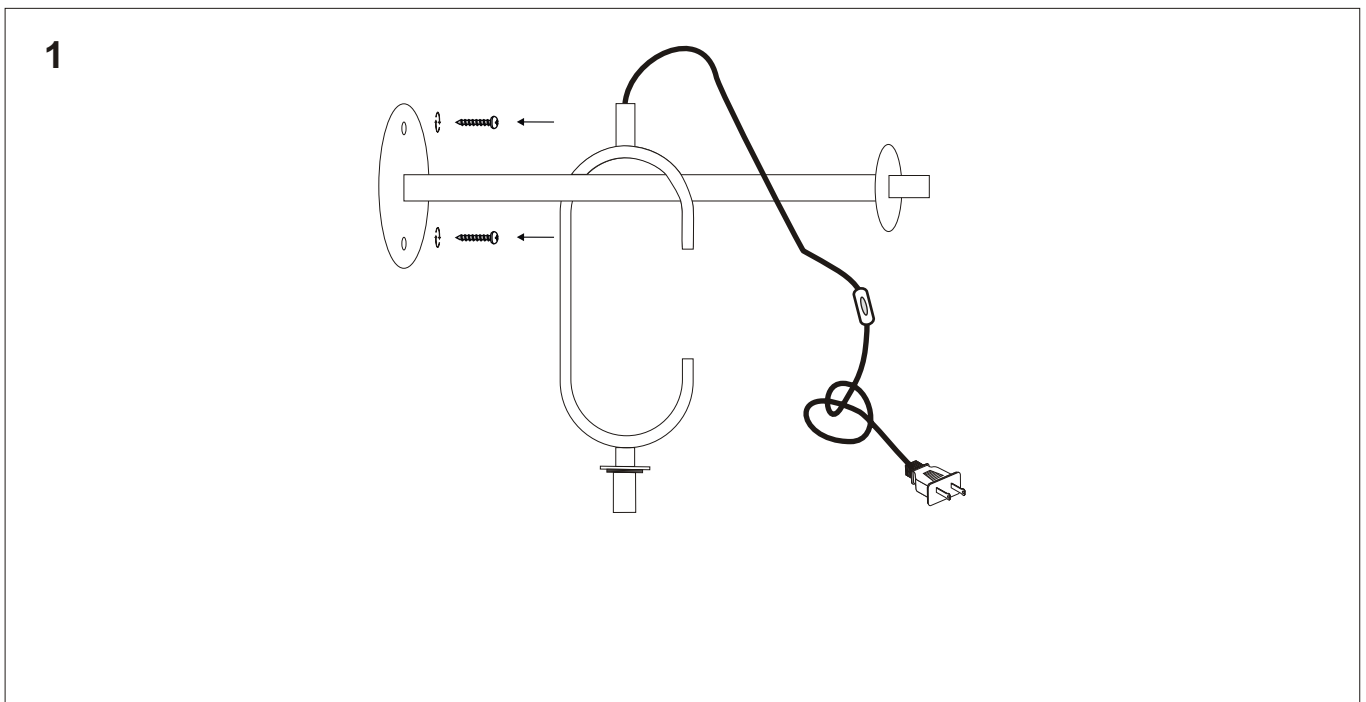

### Step 1

2

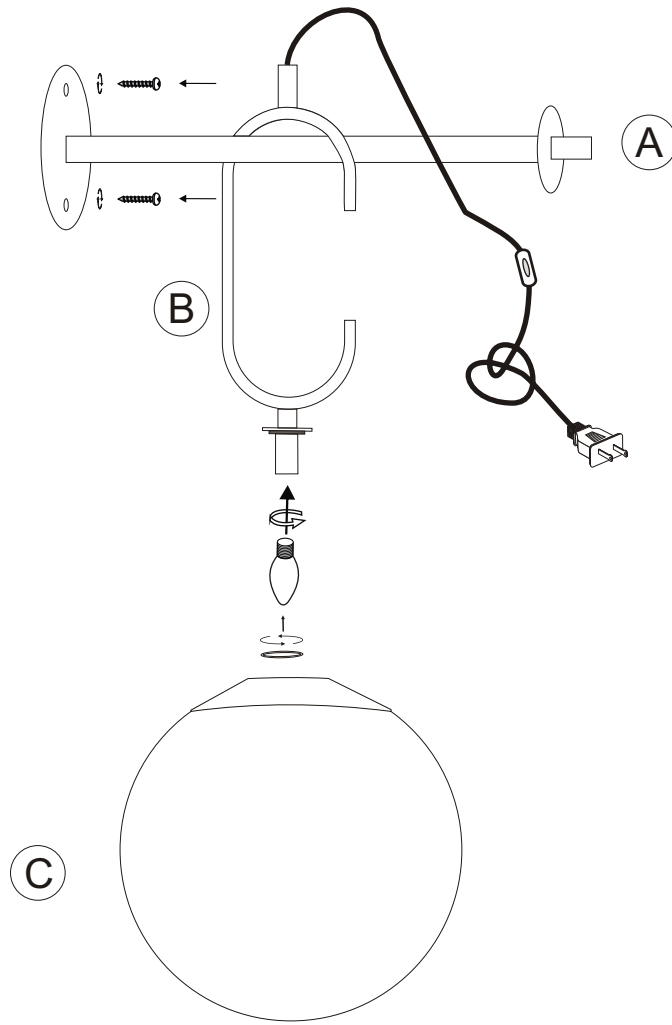

**Step 2**

# CARE & MAINTENANCE

---

1. Do not use acids or alkaline cleaning agents.
2. Sharp objects will damage and scratch the surface.
3. Wipe the surface with a soft, damp cloth.
4. Please make sure that you have all parts indicated before you begin assembly of this item
5. This item should be assembled on a soft surface to prevent scratching the finish during assembly
6. This item may require periodic tightening