


**KULI BLUSH WALL SCONCE**  
**TOV-G18268**

# TOV










# KULI

---
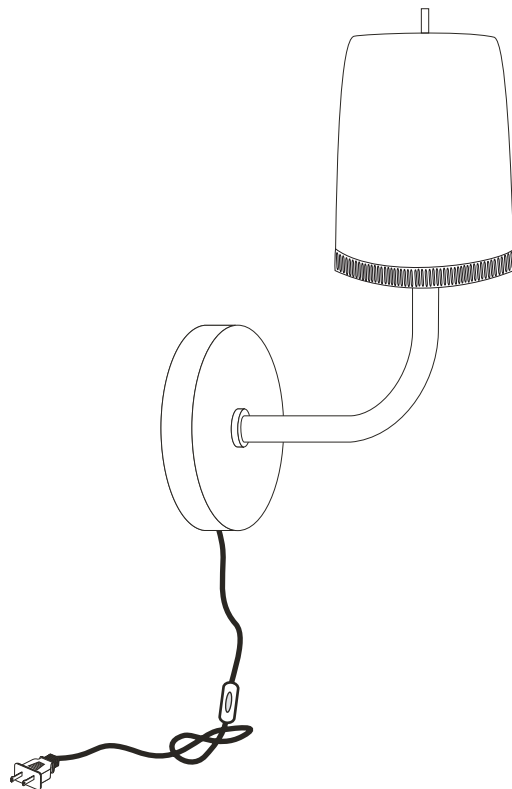
## ASSEMBLY INSTRUCTIONS




# PARTS LIST & HARDWARE LIST

LABEL	DESCRIPTIONS	PICTURE	QTY
A	CANOPY		1X
B	MOUNTING PLATE		1X
C	SIDE SCREW		2X
D	PLASTIC CEILING MOUNTS		2X
E	SCREW		2X
F	SHADE BORDER		1X
G	TOP NUT		1X
H	SHADE		1X
I	SHADE HOLDER		1X


## PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product. Estimated Assembly Time: 10 minutes.

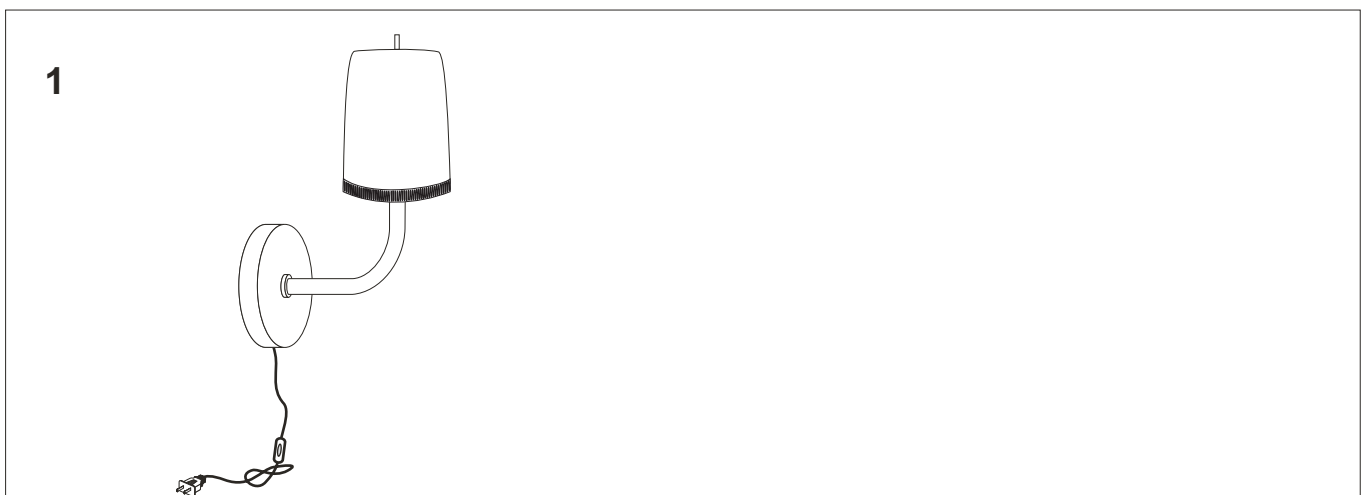

## Step 1

2

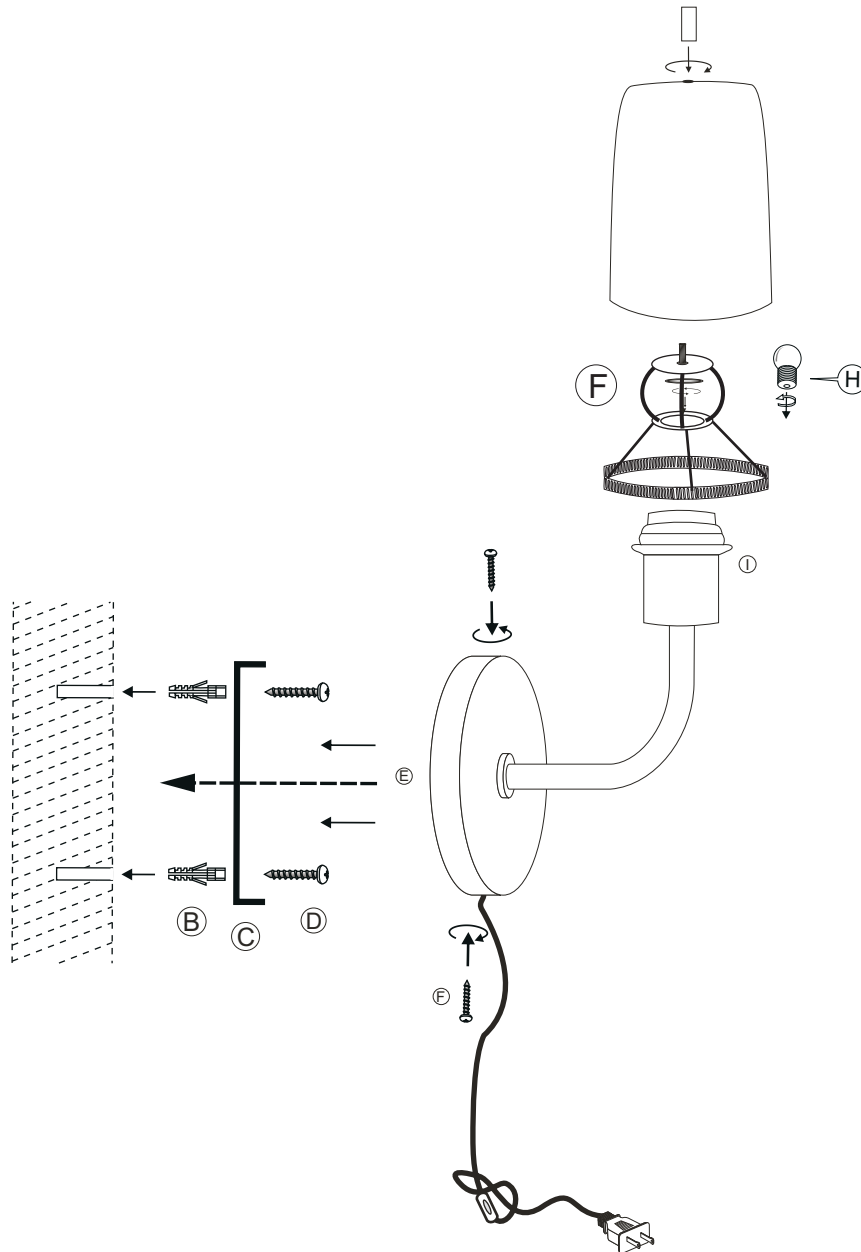

- (1) Secure the wall mounting plate (C) with screw (D) in the Plastic wall Mounts (B).
- (2) Tighten the lamp canopy (E) with side Screw (F) to the mounting plate (C).
- (3) Secure the Light Bulb (H) / E26 into the Plastic Lamp Holder (I).

## Step 2

# CARE & MAINTENANCE

---

1. Do not use acids or alkaline cleaning agents.
2. Sharp objects will damage and scratch the surface.
3. Wipe the surface with a soft, damp cloth.
4. Please make sure that you have all parts indicated before you begin assembly of this item
5. This item should be assembled on a soft surface to prevent scratching the finish during assembly
6. This item may require periodic tightening